

Installation Manual and Operating Instructions

TRUE BLUE POWER

TC120

DC/DC POWER
CONVERTER

Manual Number
9018558



Revision G October 21, 2020

FOREWORD

This manual provides information intended for use by persons who, in accordance with current regulatory requirements, are qualified to install this equipment. If further information is required, please contact:

True Blue Power
c/o Mid-Continent Instrument Co., Inc.
Attn: Customer Service Dept.
9400 E. 34th St. N.
Wichita, KS 67226 USA
Phone 316-630-0101
Fax 316-630-0723
www.truebluepowerusa.com
www.mcico.com

We welcome your comments concerning this manual. Although every effort has been made to keep it free of errors, some may occur. When reporting a specific problem, please describe it briefly and include the manual part number, the paragraph/figure/table number and the page number. Send your comments to:

True Blue Power
c/o Mid-Continent Instrument Co., Inc.
Attn: Technical Publications
9400 E. 34th St. N.
Wichita, KS 67226 USA
Phone 316-630-0101
Fax 316-630-0723



Download the current version of this installation manual using your smartphone or tablet.

© Copyright 2016
Mid-Continent Instrument Co., Inc.

TABLE OF CONTENTS

<u>SECTION 1</u>	<u>GENERAL DESCRIPTION</u>	<u>4</u>
1.1	INTRODUCTION	4
1.2	TECHNICAL SPECIFICATIONS	5
<u>SECTION 2</u>	<u>PRE-INSTALLATION CONSIDERATIONS</u>	<u>6</u>
2.1	COOLING	6
2.2	EQUIPMENT LOCATION	6
2.3	ROUTING OF CABLES	6
2.4	LIMITATIONS	6
2.5	MODIFICATION	7
<u>SECTION 3</u>	<u>INSTALLATION</u>	<u>8</u>
3.1	GENERAL INFORMATION	8
3.2	UNPACKING AND INSPECTING EQUIPMENT	8
3.3	CABLE HARNESS	8
3.4	MOUNTING	11
3.5	INSTALLATION CAUTION	11
3.6	INSTALLATION COMPLETION	11
<u>SECTION 4</u>	<u>OPERATION</u>	<u>12</u>
4.1	ELECTRICAL PERFORMANCE	12
4.2	PROTECTIVE FEATURES	12
<u>SECTION 5</u>	<u>CONFORMANCE</u>	<u>14</u>
5.1	INSTRUCTIONS FOR CONTINUED AIRWORTHINESS	14
5.2	ENVIRONMENTAL QUALIFICATION STATEMENT	14

REVISION HISTORY

Rev	Date	Detail	Approved
A	02/10/2016	Initial release	SHO
B	03/04/2016	Updated EQF in Section 5, corrected input voltage range, added note to Section 2.4.	BAW
C	03/15/2016	Add -2 version.	BAW
D	05/27/2016	Updated wiring drawings in Section 3.	VAA
E	02/10/2016	Updated Section 4.2.1.	KJW
F	05/07/2020	Updated style and brand to meet Marketing and Engineering guidelines.	DLR
G	10/21/2020	Updated weight.	MEK

SECTION 1 GENERAL DESCRIPTION

1.1 INTRODUCTION

The model TC120 DC/DC Power Converter is a lightweight power converter that translates a direct current (DC) input of 28 volts to an adjustable 5 to 18 volt direct current (DC) output.

The input operating voltage (24–32VDC) makes the TC120 suitable for nearly any common general, business, or commercial aviation application and provides an adjustable DC output voltage of 5 to 18VDC. The unit is rated for a nominal output of 120 watts to power avionics, instrumentation, personal charging, lighting, and many other applications. The TC120 DC/DC Converter is FAA certified to TSO-C71 and tested to rigorous environmental standards and levels of RTCA DO-160G. The small size and light weight in conjunction with its installation flexibility (inside or outside the pressure vessel) make it an ideal choice for aircraft power needs while reducing the challenges associated with other similar products.

Highlighted features include short circuit protection, overload capability, low input voltage shut-down, temperature monitoring, reverse polarity protection, a self-resettable over-temperature disable and an optional remote enable (on/off) feature.

The TC120 DC/DC converter has a robust Military-rated circular connector and a rugged aluminum case which dissipates heat and provides excellent mechanical strength. It is engineered to require no external cooling and contains no internal fans or cooling methods, which saves energy, reduces weight and allows more flexible installation locations. At only 11.0 oz (312 g), it is lighter and smaller than any other certified solution in the aviation market today.

1.2 TECHNICAL SPECIFICATIONS

Electrical Attributes	
Input Voltage	Rated 28VDC nominal, Operating 24 – 32VDC
Input Current (full load)	5 amps max at nominal input voltage
Output Voltage	5 – 18VDC adjustable
Output Power	120 watts nominal
Efficiency	95% nominal

Table 1.1

Physical Attributes	
Weight	11.0 oz (312g)
Dimensions (not including connector mate)	2.75 inches long x 3.75 inches wide x 1.29 inches high (69.9 mm long x 95.3 mm wide x 32.8 mm high)
Mating Connector Kit	MCIA P/N 9018651
Mounting	Base mount – orientation not critical

Table 1.2

Qualifications	
Certification	FAA TSO-C71
Environmental Qualification	RTCA DO-160G Environmental Category; See Section 5.2
Altitude	-15,000 feet to +55,000 feet
Temperature	-55°C to +70°C (-67°F to +158°F)

Table 1.3

SECTION 2 PRE-INSTALLATION CONSIDERATIONS

2.1 COOLING

The TC120 product does not require external cooling or contain internal active cooling. Cooling of the unit occurs exclusively through passive conduction through the base or radiated cooling across the metal case. Additional cooling can be realized through convection (exposure to free moving air) or conduction (mounting to a thermally conductive metal surface). These methods are not required to achieve rated performance but can help prevent potential overheating and extend life when the unit is operated at full power or during overload conditions. Specifically, mounting the unit to a metal surface is preferred, but not required.

2.2 EQUIPMENT LOCATION

The TC120 is designed for mounting flexibility, allowing for installation inside or outside the pressure vessel with no requirement for temperature control. In addition to altitude and temperature resistance, the unit is also designed to withstand high levels of condensing humidity. However, installation locations where the unit could be subject to standing or direct water exposure should be avoided. The unit can be mounted in any orientation. Clearance should be provided for the mating connector and may require as much as five inches past the unit connector to allow for back shell access to the connector.

2.3 ROUTING OF CABLES

The wires and cable bundle associated with the unit are heavy gauge wire and carry significant power. Be aware of routing cables near other electronics or with other wire bundles that may be susceptible to high energy flow.

Avoid sharp bends in cabling and routing near aircraft control cables. Also avoid proximity and contact with aircraft structures, avionics equipment, or other obstructions that could chafe wires during flight and cause undesirable effects.

2.4 LIMITATIONS

The conditions and tests for TSO approval of this article are minimum performance standards. Those installing this article, on or in a specific type or class of aircraft, must determine that the aircraft installation conditions are within the TSO standards. TSO articles must receive additional installation approval prior to being operated on each aircraft. The article may be installed only according to 14 CFR Part 43 or the applicable airworthiness requirements.

2.5 MODIFICATION

This product has a nameplate that identifies the manufacturer, part number, description, certification(s) and technical specifications of the unit. It also includes the “MOD” or modification number representing notable changes in the hardware design of the unit.

Modification (MOD) 0 is the initial release of the product and is identified on the nameplate by the lack of marking on the MOD numbers 1 through 9 (i.e. 1-9 are visible). All subsequent modifications are identified on the nameplate by the marking/blacking out of that particular MOD number (i.e. for MOD 1, the number 1 is not visible and 2-9 are visible - see Figure 2.1 for examples). MODs do not have to be sequentially inclusive and may be applied independent of each other.

For additional details regarding specific changes associated with each MOD status refer to the product published Service Bulletins at www.truebluepowerusa.com.

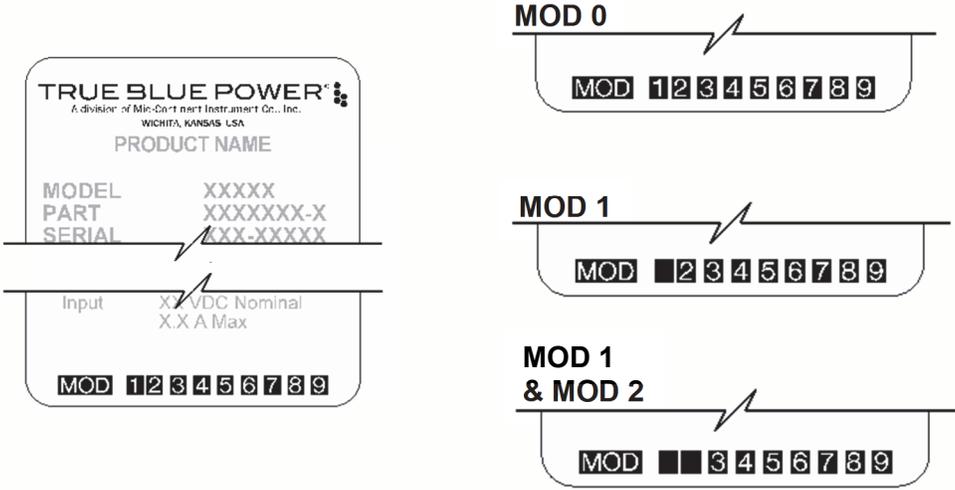


Figure 2.1
Nameplate and MOD Status Example

SECTION 3 INSTALLATION

3.1 GENERAL INFORMATION

This section contains interconnect diagrams, mounting dimensions and other information pertaining to the installation of the TC120 DC/DC Converter. After installation of cabling and before installation of the equipment, ensure that power is applied only to the pins specified in the interconnect diagram.

The following two versions of the unit are available. See section 4.2.1 for additional details of the remote enable (on/off) feature and installation details within section 3.

Part Number	Remote On/Off
6430120-1	No (output always enabled)
6430120-2	Yes (enable signal required)

3.2 UNPACKING AND INSPECTING EQUIPMENT

When unpacking this equipment, make a visual inspection for evidence of any damage that may have incurred during shipment. The following parts should be included:

- | | |
|------------------------|-----------------|
| A. DC/DC Converter | P/N 6430120-() |
| B. Connector Kit | P/N 9018651 |
| i. Mating Connector | |
| ii. Strain Relief | |
| C. Installation Manual | P/N 9018558 |

Equipment not provided:

- | | |
|--|--------------------------------------|
| A. Mounting Hardware
#6 lock washers (optional) | four 6-32 x 1" (min) pan head screws |
| B. Cable Harness Wire | See Section 3.3 for specifications |

3.3 CABLE HARNESS

Construct the cable harness with regards to the instructions below, and using Figures 3.3 – 3.5, and Wiring Diagram of Table 3.3.

Refer to Section 2: Pre-Installation Considerations in regards to routing precautions.

3.3.1 Wire Gauge Selection

Use of PTFE, ETFE, TFE, Teflon, or Tefzel insulated wire is recommended for aircraft use. Use the following wire gauges for each of the pins in the connector:

- Pins A and B – 18 or 16 AWG stranded or solid
- Pins C and D – 16 AWG stranded or solid
- Pin E – 24 AWG stranded or solid

3.3.2 Pin Assignment Information

- DC Input** – (24-32 VDC). Connect pin A to the aircraft positive 28 VDC bus (7.5 amp circuit breaker recommended)
- DC Return** – Connect pin B to input power return or aircraft ground. Equivalent to pin D
- DC Output** – Connect pin C as the positive output voltage (adjustable)
- DC Return** – Connect pin D to output return or aircraft ground. Equivalent to pin B
- Enable** – 6430120-1: pin E to remain open/unconnected
6430120-2: pin E to be grounded to enable power output (via switch or other means. See section 4.2.1 and figure 3.3 for related details)

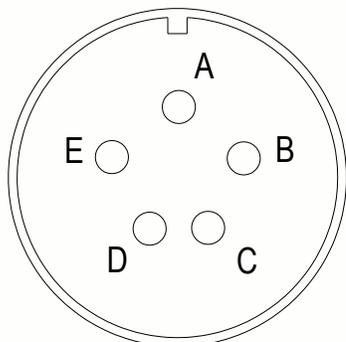


Figure 3.1
Pinout View of Unit Connector

Connector Pinout	
A	DC Input
B	DC Return
C	DC Output
D	DC Return
E	Enable

Table 3.1
Connector Pinout

3.3.3 Harness Verification

With the TC120 DC/DC Power Converter disconnected, activate the aircraft power bus that supplies the unit and use a multi-meter to measure and verify the power, ground, and enable voltages on the appropriate pins within the mating harness.

3.3.4 Output voltage Adjustment

The output voltage can be set to any value between 5 and 18VDC.

NOTE: The default output voltage is initially set to approximately 13.8V at the factory.

The output voltage may be adjusted while the TC120 DC/DC Power Converter is connected to the mating harness and aircraft power, but disconnected from the output load. Use a multi-meter at the load end of the harness to measure output voltage.

The adjustment trimmer may be accessed by removing the 4-40 screw near the label as shown in Figure 3.4. After removing the screw, a flat blade screwdriver (2mm) will fit into the hole and the trimmer. Turn the trimmer carefully either clockwise to increase voltage or counter-clockwise to decrease voltage. Replace the 4-40 screw after adjustment is complete.

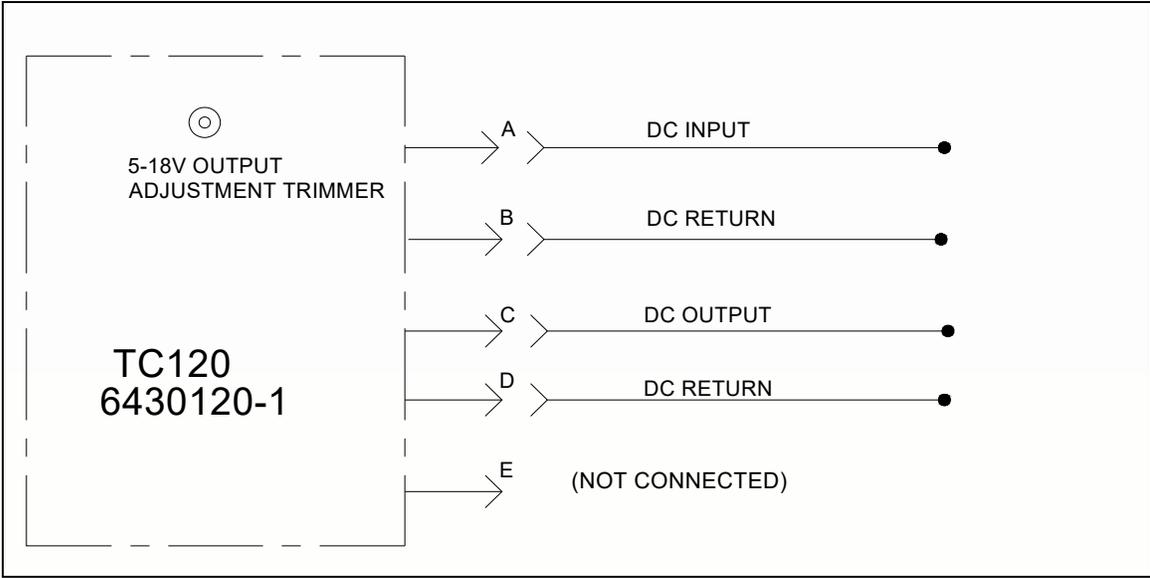


Figure 3.2: Typical 6430120-1 Aircraft Wiring Installation – Constant On

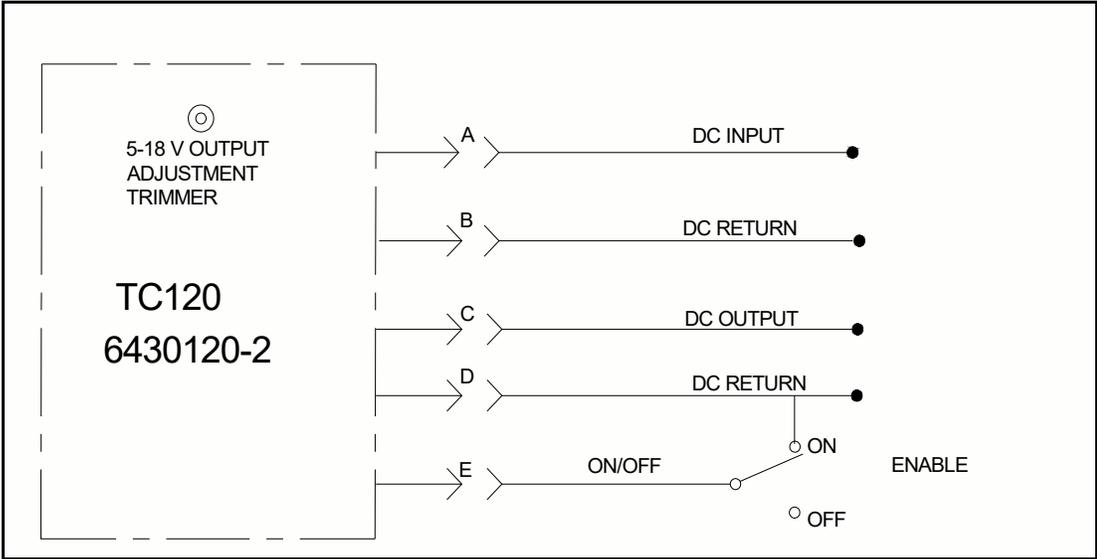


Figure 3.3: Typical 6430120-2 Aircraft Wiring Installation – Remote On/Off

3.4 MOUNTING

Refer to Section 2: Pre-Installation Considerations in regards to equipment location.

The TC120 DC/DC Converter is designed for base mounting only. Four 6-32 mounting holes should be provided in the aircraft in accordance with Figure 3.6. Secure the unit with four 6-32 pan head screws, or equivalent. A lock washer under the head of each screw is recommended.

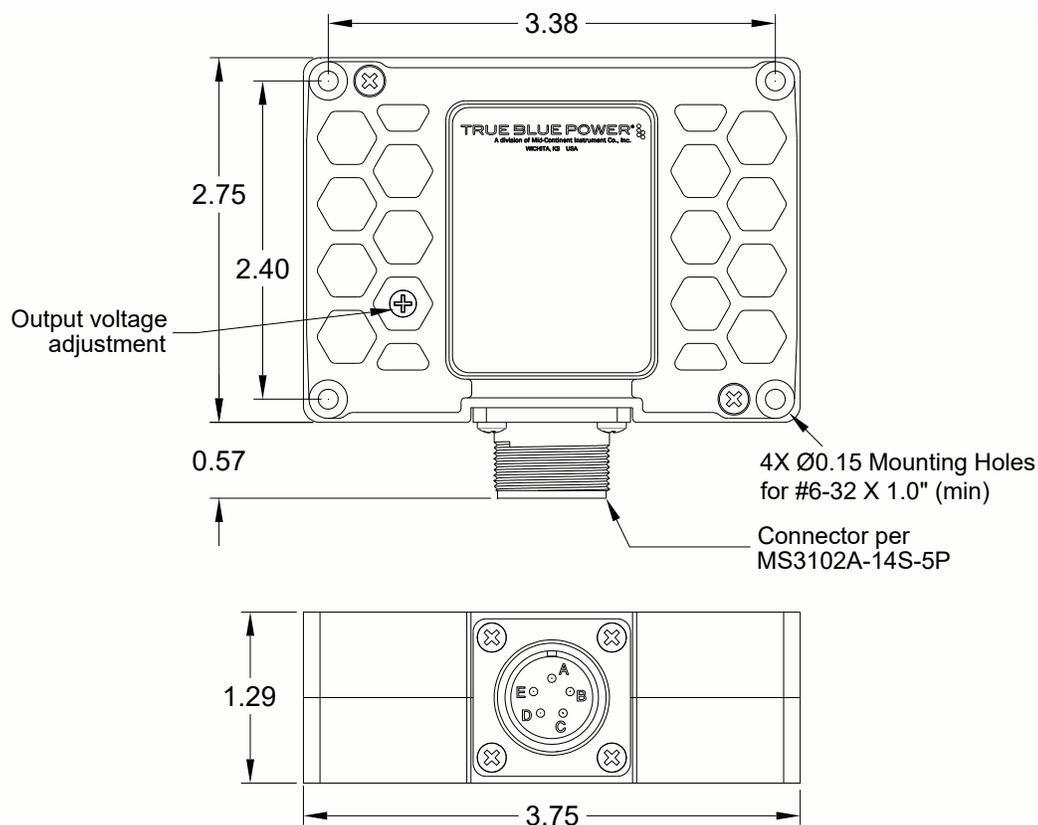


Figure 3.4

TC120 DC/DC Converter Outline Drawing

3.5 INSTALLATION CAUTION

Under no circumstances should the output of the Converter to be connected to another power output source or damage will occur to the unit or the connected power source.

3.6 INSTALLATION COMPLETION

Prior to operating the unit in the aircraft, it is recommended to verify the output and functionality of the unit. In order to prevent accidental damage to other systems, it is best not to attach the output to other equipment or power busses prior to verification. Verify the output of the unit at the terminating end of the cable with a multi-meter to ensure proper voltage and polarity. Once verified, installation can be completed and functionality of the remote on/off feature (if used) should be checked.

SECTION 4 OPERATION

4.1 ELECTRICAL PERFORMANCE

The TC120 is designed as a non-isolated, buck topology, solid-state switch-mode power supply. The unit converts a direct current voltage (VDC) input to a regulated 5-18 VDC output. It is capable of providing up to 120 watts of power to a variety of aircraft accessories including lights and onboard systems or portable consumer product power. Rated output current, and thus power, is a function of the user-selected output voltage. See Figure 4.1 for maximum current vs. voltage.

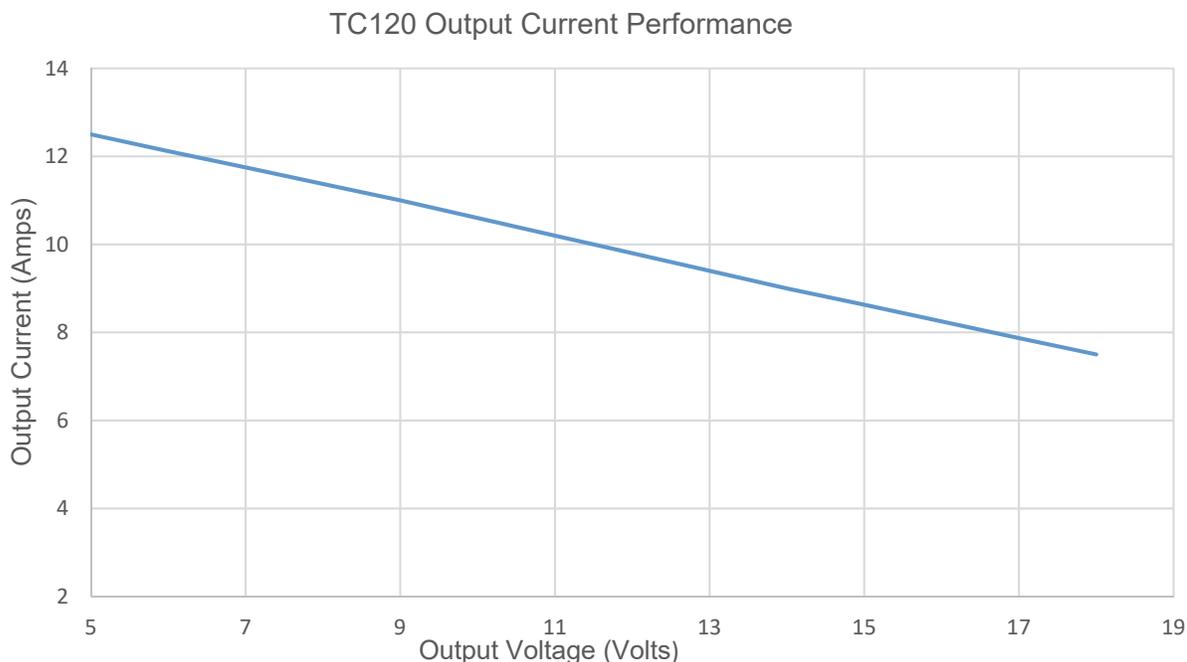


Figure 4.1
TC120 Output Current Performance

4.2 PROTECTIVE FEATURES

4.2.1 Remote On/Off

A version of the TC120 DC/DC Converter (6430120-2 only) incorporates a remote on/off feature that allows the user to enable or disable the output of the unit. By providing a ground on the appropriate pin, the user can enable the output of the unit via a remote mounted switch. (See Figure 3.3)

4.2.2 Input Voltage Limit

If the input voltage exceeds 34VDC, the unit senses an over-voltage condition at the input and disables the output.

4.2.3 Over-Temperature

The TC120 C/DC Converter incorporates an internal temperature sensing device that continually provides monitoring and feedback to the control circuits. When the unit senses an internal condition that exceeds maximum temperature ratings, the output is disabled. The Converter will continue to remain shut-down until the temperature returns to within acceptable limits. This over-temperature reset occurs automatically without external intervention required.

4.2.4 Short Circuit and Over-Current

The TC120 DC/DC Converter is capable of surviving a short circuit or over-current event without permanent damage or effect to long-term reliability. The unit can provide over its rated power output up to 132 watts for over 120 minutes (until over-temperature shutdown occurs).

The Converter monitors the DC output on a pulse-by-pulse scenario to determine a short-circuit or over-current situation. If detected, the output is limited by limiting the current output to less than 11 A. If the short-circuit or over-current situation is removed, the unit will return to normal operation.

SECTION 5 CONFORMANCE

5.1 INSTRUCTIONS FOR CONTINUED AIRWORTHINESS

No periodic scheduled maintenance or calibration is necessary for continued airworthiness of the TC120 DC/DC Converter. If the unit fails to perform to specifications, the unit must be removed and serviced by Mid-Continent Instruments and Avionics or their authorized designee.

5.2 ENVIRONMENTAL QUALIFICATION STATEMENT

MODEL NUMBER: TC120 **PART NUMBER:** 6430120-()
DESCRIPTION: DC/DC Converter **CERTIFICATION:** FAA TSO-C71
MANUFACTURER: True Blue Power, a division of Mid-Continent Instrument Co., Inc.
ADDRESS: 9400 E. 34th St. North, Wichita, KS 67226, USA.
SPECIFICATION: Test Specification (TS) 627 Test Data Sheet (TDS) 627
STANDARD: RTCA DO-160, Rev G, dated 12/08/10

CONDITIONS	SECTION	DESCRIPTION OF TEST
Temperature and Altitude	4	Category F2
Temperature Variation	5	Category S2
Humidity	6	Category B
Operational Shock and Crash Safety	7	Category B
Vibration	8	Fixed Wing: Category R; Curve C, C1 Rotorcraft: Category U, Curve G
Explosion	9	Category X
Waterproofness	10	Category X
Fluids	11	Category X
Sand and Dust	12	Category F
Fungus	13	Category X
Salt Fog	14	Category X
Magnetic Effect	15	Category Z
Power Input	16	Category B(XX)
Voltage Spike	17	Category B
Audio Frequency Conducted Susceptibility	18	Category R
Induced Signal Susceptibility	19	Category X
Radio Frequency Susceptibility	20	Category X
Emission of Radio Frequency Energy	21	Category M
Lightning Induced Transient Susceptibility	22	Category X
Lightning Direct Effects	23	Category X
Icing	24	Category X
ESD	25	Category A
Fire, Flammability	26	Category X

REMARKS: